




**VOLUNTEER MARINE RESCUE WHITSUNDAY**  
**STANDARD OPERATING PROCEDURE**  
**FIRE PUMP START PROCEDURE**

Version: 4

## FIRE PUMP START PROCEDURE


Onga LCT65 Transfer Pump with Loncin 6.5hp engine

Attach suction hose after filling with water, then attach delivery hose.  
Prime pump by filling pump through the valve at top of pump casing.

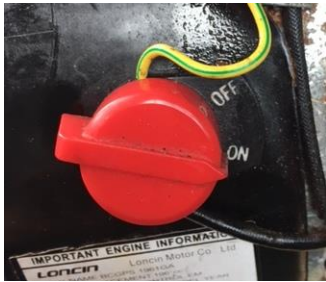

ENSURE PUMP IS SWITCHED ON

Adjust carburettor.

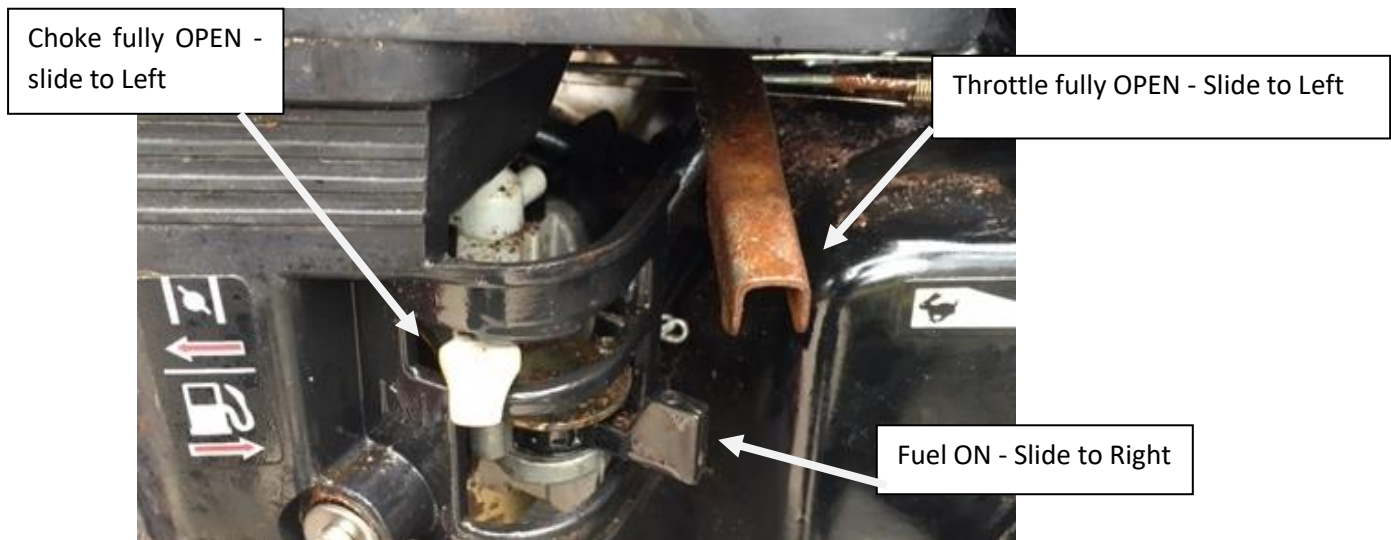

Engine is ready to start - **Once engine STARTS:**

1. Close CHOKE.
2. Adjust THROTTLE to desired water flow.

**Shut Down - Close FUEL** - slide fuel lever to Left - allow pump to run till it shuts down. Turn switch OFF, allow to cool, then spray with LANOX before storing.